

## Instructions for Configuring Your Fuel Price Signs


### Using the RF Remote Control





The system must be wired and powered on to perform configuration.



There are 7 Parameters.

To enter configuration mode, "Rapidly" press the UP  key 5 times.

Left  and Right  keys navigate between the 7 Parameters.

Up  and Down  keys change the variables.

The Parameter Number will display on the Left.

Parameter 1 - Software Version: Cannot change this variable.

Parameter 2 - Single or Double Sided Sign: "0" for Single Sided or "1" for Double Sided

Parameter 3 - Number of Fuel Price Signs Per Side: Can Enter 1 to 12

Parameter 4 - Number of Digits in one Panel: 3-6

Parameter 5 - Display the 9/10 or not: "0" Not to Display or "1" to Display

Parameter 6 - Brightness Level Setting (1-8): "0" for Auto Brightness (Sensor)

Parameter 7 - Dot Position: 0-6 to Determine Dot Location

Once Completed, Press the Return  Key to Exit the Configuration Mode.